


Getting started.

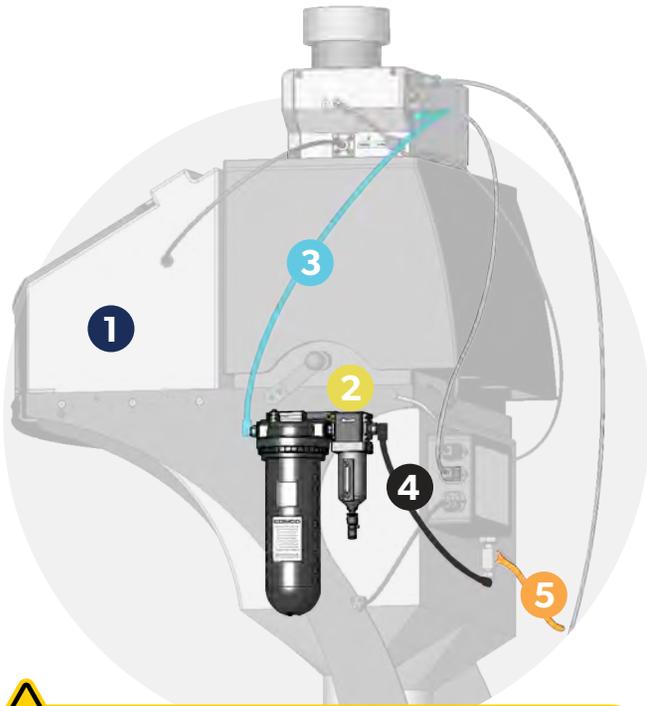

Never clean plastic bowl with any solvent. Use soap and water only.



Adding or Changing Desiccant

- 1 To change or add desiccant, shut off air and bleed system
- 2 Press tab on collar and rotate to unlock
- 3 Lower the guard and then the large bowl assembly
- 4 Fill with fresh desiccant. Note: take care that desiccant does not enter the small tube in the center of the bowl when filling it
- 5 Reassemble by following the same steps in reverse

Recharging the Desiccant

Used desiccant may be reactivated if not contaminated with oil. Dry in a shallow pan for 2-3 hrs in 200°F oven until color changes to orange. Reseal in an airtight container to keep desiccant from absorbing moisture. Recycled desiccant will not last as long as a new charge.

1

ProCenter Plus

When installing on a ProCenter Plus with AccuFlo, see the ProCenter Plus Getting Started and AccuFlo Getting Started manual for additional guidance.

2

Mounting Air Dryer

Install air dryer using four mounting holes.

3

Air From Dryer

Connect 3/8" black tubing from air dryer to blaster inlet air connector.

4

To Air Dryer

Connect 3/8" black tubing from air dryer to inlet air tee fitting.

5

Shop Air

Connect shop air using a 1/4" Industrial Quick-Disconnect.

Specifications

Maximum Input Pressure	150 PSIG
Maximum Volume	10 SCFM
Maximum Moisture Output	80 PPM
Maximum Air Dried Per Charge	4,000 CF



Air Dryer Maintenance

As the desiccant removes water, it will start to change color. In order to maintain dry air, the desiccant must be replaced when the orange beads begin to change to green.

Maintenance Interval: Check weekly

Replacement Interval: 1-2 months

Replacement Desiccant: ST6104-4 (pack of 4 charges)

Replacement Parts.

